



50
YEARS IN THE USA

2008-2013 Special Tools Catalog

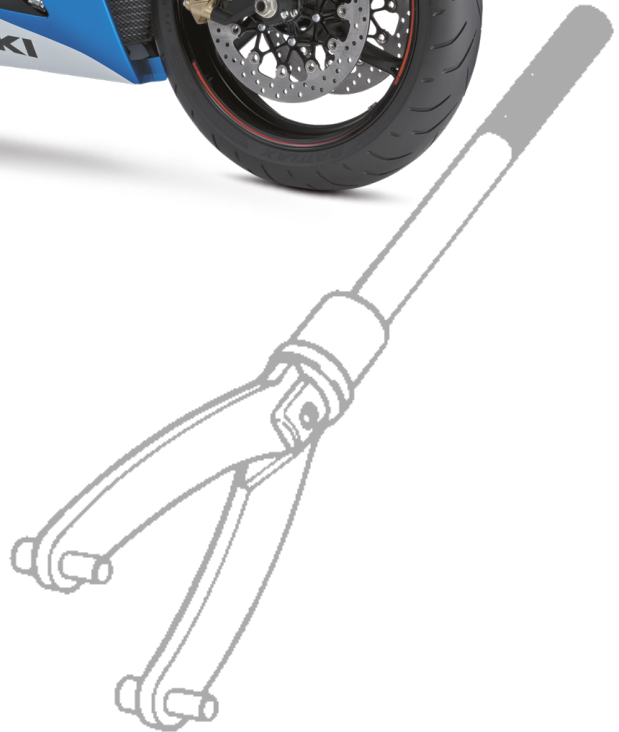 
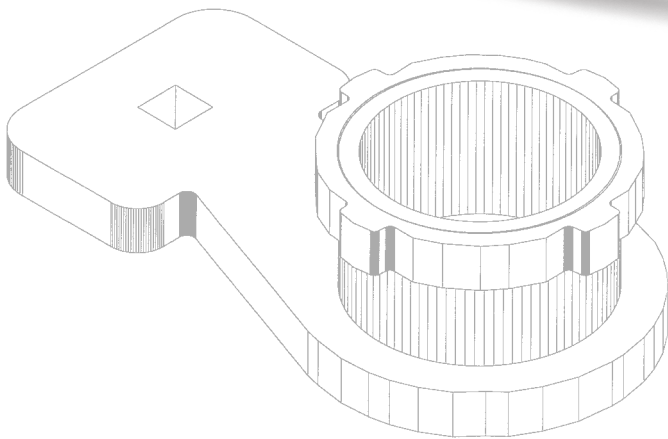 


Table of Contents

<i>Section</i>	<i>Page</i>
Introduction.....	II
Tool Index.....	III
General Tools	III
Engine Tools.....	III
Chassis Tools	V
Electrical Tools	V
All Tools Listing.....	1
General Tools	1
Engine Tools.....	2
Chassis Tools	12
Electrical Tools	16
Neway Valve Seat Cutter Tool Set.....	17
Tools by Model Listing.....	18
Motorcycle.....	18
Scooter.....	37
ATV.....	39

SPECIAL TOOL CATALOG

INTRODUCTION

This special tool catalog provides service technicians with a list of Suzuki Motor Corporation tools available through Suzuki Motor of America, Inc. (SMAI). It covers motorcycles, scooters and ATVs distributed by SMAI from 2008 through 2013. These special service tools are designed for specific applications of disassembly, measurement and reassembly. Using these tools greatly reduces the amount of time involved with these applications as well as the possibility of damaging components.

This catalog is laid out into four primary sections:

- The first section is a tool index listing all special tools grouped into one of several categories and then arranged by part number with a tool description.
- In the second section, each special tool is listed by category in numerical order with a picture and description of the tool.
- The third section describes the Neway Valve Seat Cutter Tool Set and how to order it directly from Neway Manufacturing.
- Finally, the last section of this catalog lists all the models sold by SMAI between 2008 and 2013 and provides a listing of the applicable special tools required for those vehicles.

NOTE:

Some tools may no longer be available from SMAI. Many of these tools can be obtained from third-party tool suppliers such as Motion Pro, K & L Supply Co., Snap-On Tools, Sears, or your local machine shop supply company.

Copyright © 2013 Suzuki Motor of America, Inc. All rights reserved. This catalog or any part thereof may not be reproduced in any form without permission from SMAI. This catalog was current at the time of publication. Suzuki reserves the right to make changes in tool design, applicability, and availability at any time.

GENERAL TOOLS	
Tool P/N	Description
09900-06107	Snap ring remover (open type)
09900-06108	Snap ring remover (close type)
09900-09004	Impact driver set
09900-18710	Hexagon socket (12 mm)
09900-20202	Micrometer (25 - 50 mm)
09900-20205	Micrometer (0 - 25 mm)
09900-20602	Dial gauge (1/1000 mm, 1 mm)
09900-20607	Dial gauge (1/100 mm, 10 mm)
09900-20701	Dial gauge chuck
09900-21303	V-block set (75 mm)
09900-21304	V-block set (100 mm)
09900-22403	Small bore gauge (18 - 35 mm)
09910-60611	Universal clamp wrench
09916-84511	Tweezers
09922-21410	Deep socket (46 mm)
09923-12410	46 mm socket
09924-52460	Socket wrench (52 mm)
09924-62430	Long socket (22 mm)
09930-11910	Torx wrench (E5)
09930-11940	Bit holder (3/8" drive)
09930-11950	Torx wrench (T25H)
09930-11960	Torx wrench (T20H)
09944-28321	Hexagon bit socket (19 mm)

ENGINE TOOLS	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09910-32820	Crankshaft installer spacer (10 mm)
09910-32840	Crankshaft installer attachment
09910-32850	Crankshaft installer attachment
09910-32860	Crankshaft installer spacer (20 mm)
09910-32870	Crankshaft installer attachment
09910-33210	Piston pin puller attachment
09910-34510	Piston pin puller
09911-11310	Crankshaft installer attachment
09913-10720	Compression gauge adapter
09913-10730	Fuel level gauge
09913-10750	Compression gauge adapter
09913-13140	Carburetor balancer attachment


09913-50121	Oil seal remover
09913-60210	Journal bearing installer / remover
09913-60230	Journal bearing installer / remover
09913-60241	Journal bearing holder
09913-60250	Journal bearing installer / holder set
09913-60910	Bearing / gear puller
09913-61510	Bearing puller
09913-70210	Bearing installer set
09913-75810	Bearing installer
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09913-85210	Bearing / oil seal installer
09914-61010	Gear holder
09915-17410	Oil pressure gauge adapter
09915-40620	Oil filter wrench
09915-47320	Oil filter wrench
09915-63210	Compression gauge adapter
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-70610	Oil pressure gauge attachment
09915-72410	Oil pressure gauge attachment
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-74533	Oil pressure gauge adapter
09915-74540	Oil pressure gauge attachment
09915-74570	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-14530	Valve spring compressor attachment
09916-14910	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-33320	Valve guide reamer (9.8 mm)
09916-34531	Valve guide reamer (12.3 mm)
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-43211	Valve guide remover / installer
09916-43240	Valve guide installer attachment
09916-43250	Valve guide installer attachment
09916-44310	Valve guide remover / installer
09916-44910	Valve guide remover / installer

09916-44920	Valve guide installer attachment	09922-31420	Clutch spring compressor
09916-44930	Valve guide installer attachment	09922-31430	Movable drive face spring compressor
09916-44940	Valve guide installer attachment	09923-73210	Bearing remover
09916-46020	Valve guide remover / installer	09923-74511	Bearing remover (Φ 20 - 38)
09916-53340	Valve guide installer attachment	09924-21950	Front drive shaft remover
09916-53350	Valve guide installer attachment	09930-10121	Spark plug wrench set
09916-53360	Valve guide installer attachment	09930-30104	Rotor remover sliding shaft
09916-53370	Valve guide installer attachment	09930-30113	Flywheel rotor remover
09916-53380	Valve guide installer attachment	09930-30141	Rotor remover attachment A
09916-54531	Valve guide installer attachment	09930-30211	Rotor remover attachment G
09916-57311	Valve guide installer attachment	09930-30450	Rotor remover bolt
09916-57321	Valve guide installer handle	09930-30460	Rotor remover bolt
09916-57360	Valve guide installer attachment	09930-30721	Rotor remover
09916-57370	Valve guide installer attachment	09930-31921	Rotor remover set
09916-64510	Tappet depressor	09930-32410	Rotor holder
09916-74521	Piston ring compressor handle	09930-33710	Rotor remover attachment
09916-74540	Piston ring compressor band (63 - 75 mm)	09930-33730	Rotor remover
09916-74550	Piston ring compressor band (73 - 85 mm)	09930-34932	Rotor remover
09916-77310	Piston ring compressor	09930-34951	Rotor remover
09917-10410	Tappet adjuster wrench	09930-34960	Rotor remover
09917-14910	Tappet adjuster wrench	09930-34970	Rotor remover
09917-14920	Tappet adjuster wrench	09930-34980	Rotor remover
09917-23711	Ring nut socket wrench	09930-35010	Rotor remover
09917-50410	Bearing remover	09930-40113	Rotor holder
09918-53810	Chain tensioner lock tool	09930-40120	Rotor holder attachment A
09919-28610	Sleeve protector	09930-40131	Rotor holder attachment B
09920-13120	Crankcase and shaft remover	09930-40210	Rotor holder
09920-20310	Clutch spring hook	09930-44521	Rotor holder
09920-31010	CVT primary pulley shaft holder	09930-44530	Rotor holder
09920-31020	Extension handle	09930-44541	Rotor holder
09920-31030	CVT secondary pulley shaft holder	09930-44560	Rotor holder
09920-31040	CVT primary pulley shaft adapter remover	09930-44913	Rotor holder
09920-31050	CVT unit guide set	09930-70220	Starter torque limiter socket
09920-33510	Clutch spring compressor	09930-73110	Starter torque limiter socket
09920-33530	Clutch spring compressor	09930-73120	Starter torque limiter socket
09920-33540	Clutch shoe remover	09930-73130	Starter torque limiter socket
09920-34830	Starter clutch rotor holder	09930-73140	Starter torque limiter socket
09920-53722	Clutch sleeve hub holder	09930-73150	Output shaft holder
09920-53730	Clutch sleeve hub holder	09930-73170	Starter torque limiter holder
09920-53740	Clutch sleeve hub holder	09930-73180	Starter torque limiter holder
09921-20210	Bearing remover (12 mm)	09930-73190	Output shaft holder
09921-20240	Bearing remover set	09940-40211	Fuel pressure gauge adapter
09921-21820	Bearing retainer wrench (44 mm)	09940-40220	Fuel pressure gauge attachment
09921-21910	Bearing holder set	09940-40230	Fuel pressure gauge attachment
		09940-50120	Front fork inner rod holder
		09941-51012	Ring locknut wrench
		09941-64511	Bearing & oil seal remover

CHASSIS TOOLS	
Tool P/N	Description
09924-21920	Wheel hub remover set
09924-21940	Wheel hub remover set
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-41830	Bearing retainer wrench (50 mm)
09924-52420	Secondary bevel gear holder
09924-52450	Output shaft holder
09924-52470	Fixed final drive gear holder
09924-52480	Fixed propeller shaft holder
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74510	Bearing and oil seal installer handle
09924-74520	Oil seal installer / remover
09924-74550	Bearing / oil seal installer
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09925-98221	Bearing installer set
09940-11420	Steering stem nut socket wrench
09940-11430	Steering stem nut socket wrench
09940-14911	Steering stem nut socket wrench
09940-14930	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14980	Engine mounting adjuster wrench
09940-14990	Engine mounting adjuster wrench
09940-30221	Front fork cylinder holder
09940-30230	Hexagon bit socket (17 mm)
09940-30250	Front fork cylinder holder
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-34561	Front fork assembly attachment (D)
09940-34581	Front fork assembly attachment (F)
09940-34592	Front fork assembly attachment (G)
09940-51410	Bearing installer
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-52880	Oil seal attachment (36 - 46 mm)
09940-54821	Front fork cylinder holder
09940-60113	Spoke wrench
09940-84711	Rod guide case wrench (for BPF forks)
09940-92430	Rear axle nut wrench set (36 mm)
09940-92450	Rear axle nut wrench set (46 mm)
09940-92460	Rear axle nut wrench set (60 mm)


09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-53630	Front fork top cap wrench (50 mm)
09941-53660	RCU socket wrench (24 mm)
09941-53670	Front fork cap socket wrench (45 mm)
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09941-74911	Steering stem bearing installer
09941-94510	Rim protector (5 pcs.)
09942-72410	Tie-rod end remover
09943-02810	Rear cushion guard ring
09943-74111	Fork oil level gauge
09943-88211	Pinion bearing installer
09944-36011	Steering wheel remover
09944-66010	Oil seal installer
09944-66030	Oil seal installer
09951-15810	Brake disk dust cover installer
09951-16080	Bearing installer
09951-16310	Brake disc dust cover installer
09951-17010	Bearing installer

ELECTRICAL TOOLS	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82710	Mode select switch (4 pin)
09930-82720	Mode select switch (6 pin)
09931-94490	Digital igniter checker

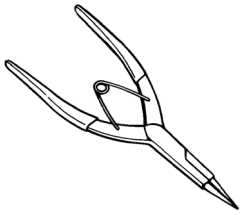 


09900-06107

 Snap ring remover (opening type)

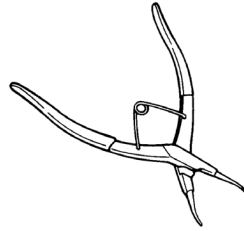


09900-06108

 Snap ring remover (closing type)

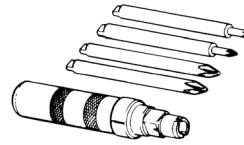


09900-09004

 Impact driver set

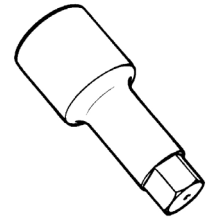


09900-18710

 Hexagon socket (12 mm)

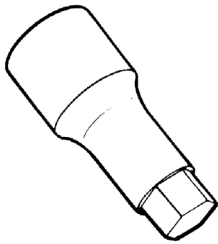


09900-18740

 Hexagon socket (24 mm)

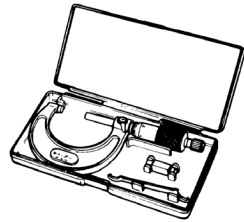


09900-20202

 Micrometer (25 - 50 mm)

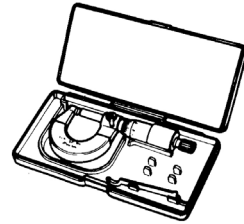


09900-20205

 Micrometer (0 - 25 mm)

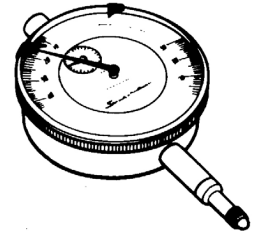


09900-20602

 Dial gauge
(1/1000 mm graduation,
1 mm range)

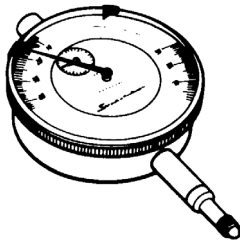


09900-20607

 Dial gauge
(1/100 mm graduation,
10 mm range)

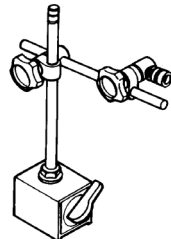


09900-20701

 Dial gauge chuck

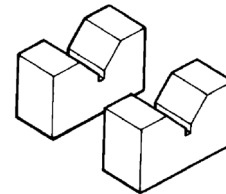


09900-21303

 V-block set (75 mm)

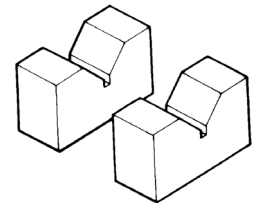


09900-21304

 V-block set (100 mm)

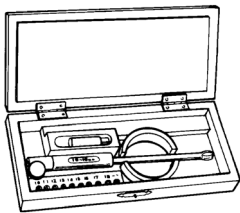


09900-22401

 Small bore gauge set
(10 - 18 mm)

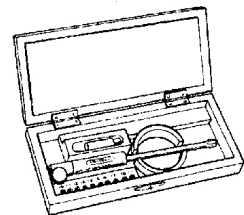


09900-22403

 Small bore gauge set
(18 - 35 mm)

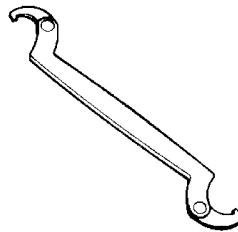


09910-60611

 Universal clamp wrench

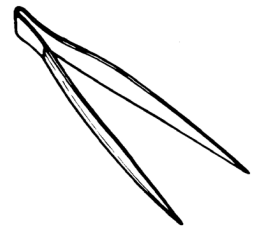


09916-84511

 
Tweezers

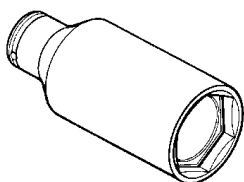


09922-21410
Deep socket (46 mm)

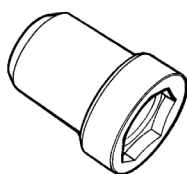 

09923-12410
Socket (46 mm)

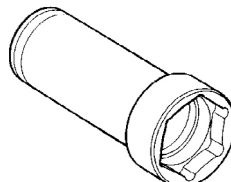 

09924-52460
Socket wrench (52 mm)

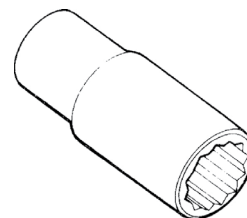 


09924-62430
Long socket (22 mm)




Torx® is the registered trademark of Camcar Division of Textron Inc. USA.

 
09930-11910
Torx wrench (E5)

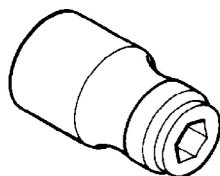


09930-11940
Bit holder (3/8" drive)

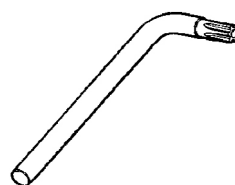 


09930-11950
Torx wrench (T25H)

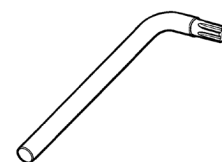 


09930-11960
Torx wrench (T20H)

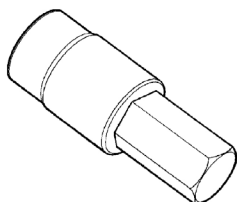 


09944-28321
Hexagon bit socket (19 mm)

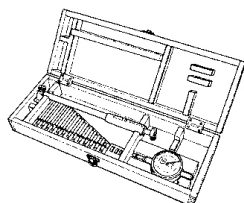 


09900-20530
Cylinder gauge set

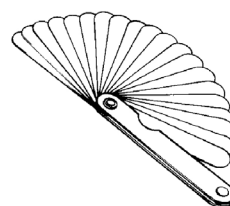 


09900-20806
Thickness ("feeler") gauge

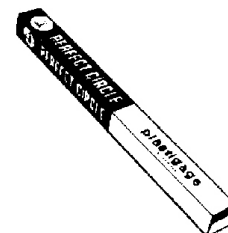 

 
09900-22301
Plastigauge (0.025 - 0.076 mm)

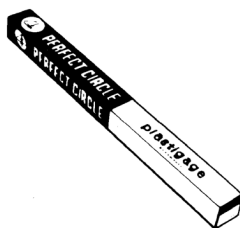

 
09900-22302
Plastigauge (0.051 - 0.152 mm)

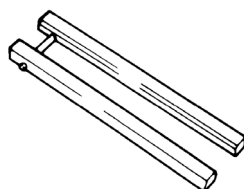


09910-20116
Connecting rod stopper

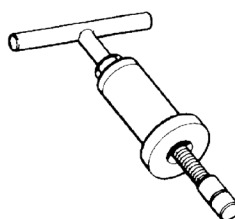 

09910-32812
Crankshaft installer

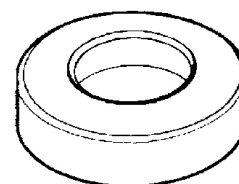 


 09910-32820
Crankshaft installer spacer (10 mm)

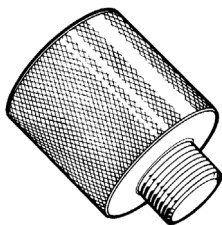


09910-32840

 Crankshaft installer attachment

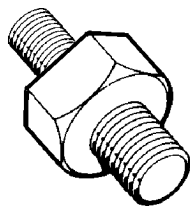


09910-32850

 Crankshaft installer attachment

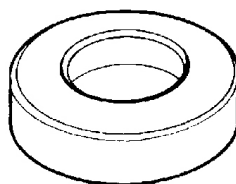


09910-32860

 Crankshaft installer spacer (20 mm)

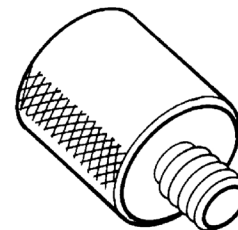


09910-32870

 Crankshaft installer attachment

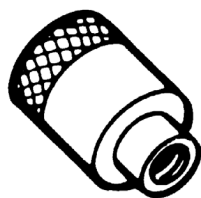


09910-33210

 Piston pin puller attachment

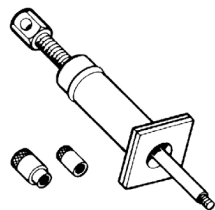


09910-34510

 Piston pin puller

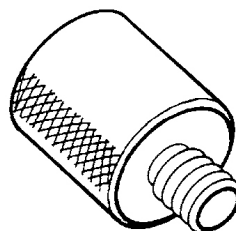


09911-11310

 Crankshaft installer attachment

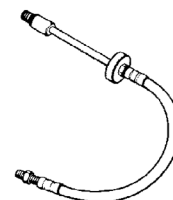


09913-10720

 Compression gauge adapter

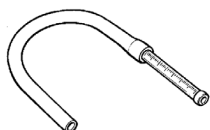


09913-10730

 Fuel level gauge

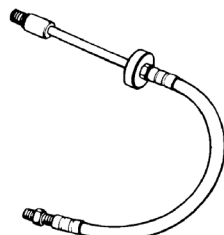


09913-10750

 Compression gauge adapter

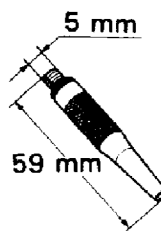


09913-13140

 Carburetor balancer attachment

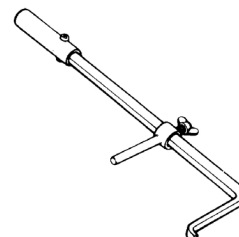


09913-50121

 Oil seal remover

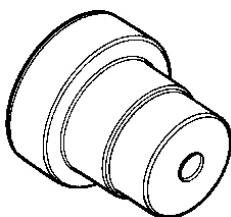


09913-60210

 Journal bearing installer / remover

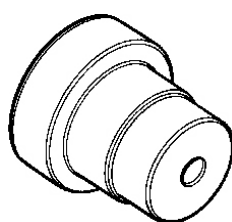


09913-60230

 Journal bearing installer / remover

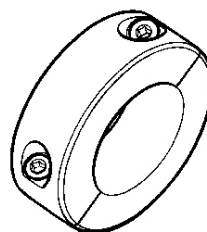


09913-60241

 Journal bearing holder

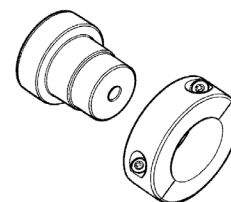


09913-60250

 Journal bearing installer / holder set

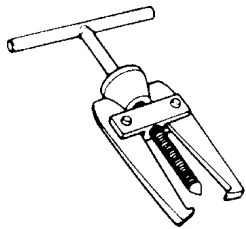


09913-60910

 Bearing / gear puller

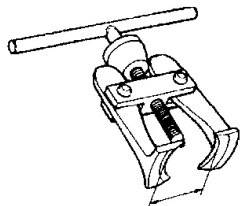


09913-61510

 Bearing puller

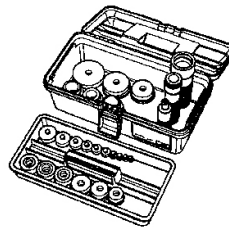


09913-70210

 Bearing installer set

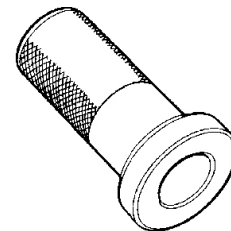


09913-75810

 Bearing installer

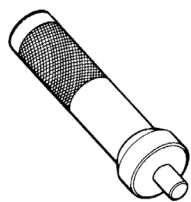


09913-75821

 Bearing installer

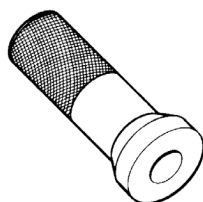


09913-76010

 Bearing installer

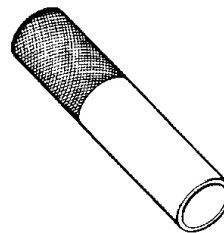


09913-84510

 Bearing installer

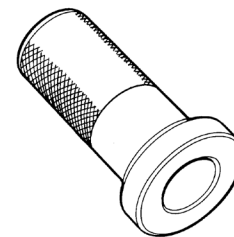

09913-85210

 Bearing / oil seal installer

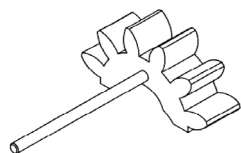


09914-61010

Gear holder



09915-17410

 Oil pressure gauge adapter

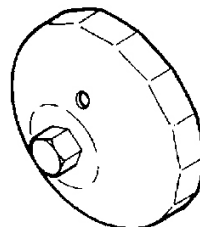


09915-40620

Oil filter wrench




09915-47320

 Oil filter wrench

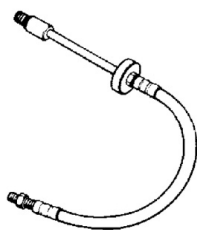


09915-63210

 Compression gauge adapter

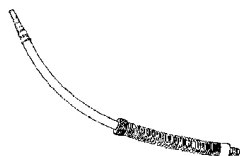


09915-63311

 Compression gauge adapter

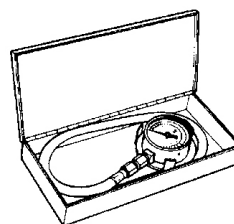


09915-64512

 Oil pressure gauge set

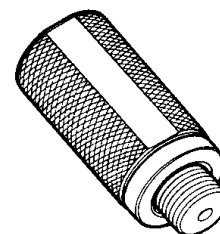


09915-70610

 Oil pressure gauge attachment

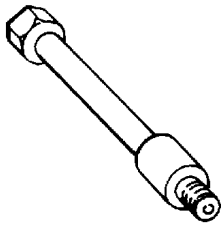


09915-72410

 Oil pressure gauge attachment

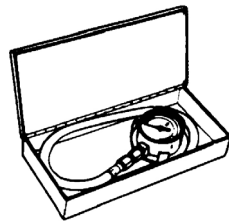


09915-74511

 Oil pressure gauge attachment

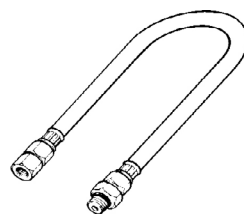


09915-74521

 Oil pressure gauge hose

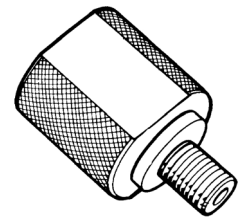


09915-74532

 Oil pressure gauge adapter

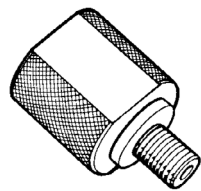


09915-74533

 Oil pressure gauge adapter

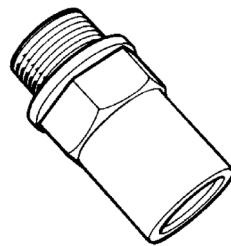


09915-74540

 Oil pressure gauge attachment

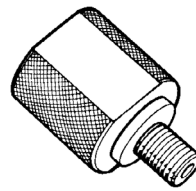


09915-74570

 Oil pressure gauge attachment

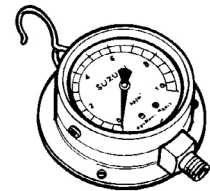


09915-77331

 Oil pressure gauge (1,000 kPa)




09916-10911

 Valve lapper set

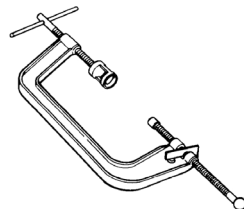


09916-14510

 Valve spring compressor

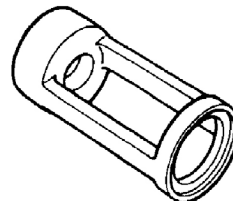

09916-14522

 Valve spring compressor attachment

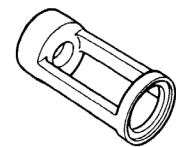

09916-14530

Valve spring compressor attachment



09916-14910

Valve spring compressor attachment



09916-33210

Valve guide reamer (4.5 mm)



 


 
 

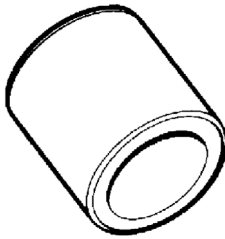 
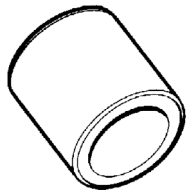 


 

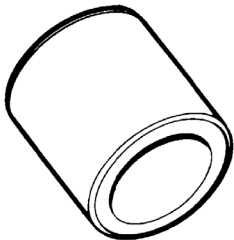 

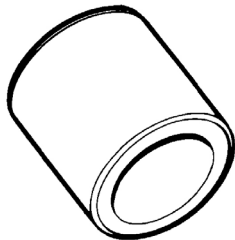 

09916-33320

 
 
 
 
 
 
 
 

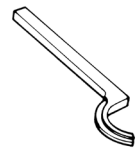 
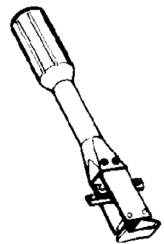 
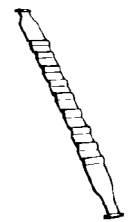 
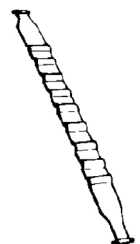 
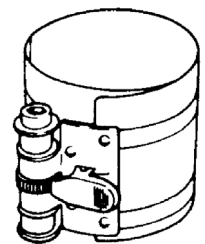 
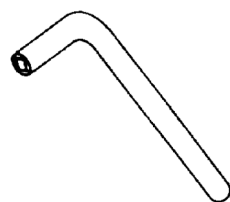 
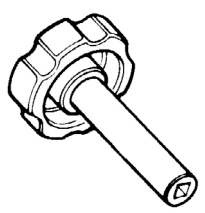 
Valve guide reamer (9.8 mm)

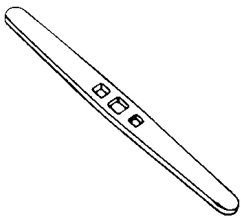

09916-34531

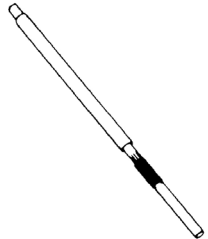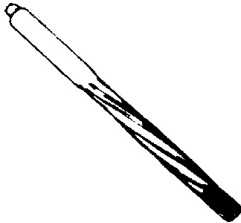Valve guide reamer (12.3 mm)

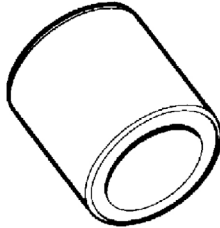
 <p>09916-34542 Reamer handle</p>	 <p>09916-34550 Valve guide reamer (5.5 mm)</p>	 <p>09916-34561 Valve guide reamer (11.3 mm)</p>	 <p>09916-34570 Valve guide reamer (5.0 mm)</p>
 <p>09916-34580 Valve guide reamer (10.8 mm)</p>	 <p>09916-43211 Valve guide remover / installer</p>	 <p>09916-43240 Valve guide installer attachment</p>	 <p>09916-43250 Valve guide installer attachment</p>
 <p>09916-44310 Valve guide remover / installer</p>	 <p>09916-44910 Valve guide remover / installer</p>	 <p>09916-44920 Valve guide installer attachment</p>	 <p>09916-44930 Valve guide installer attachment</p>
 <p>09916-44940 Valve guide installer attachment</p>	 <p>09916-46020 Valve guide remover / installer</p>	 <p>09916-53330 Valve guide installer attachment</p>	 <p>09916-53340 Valve guide installer attachment</p>

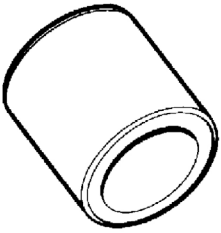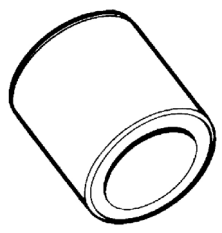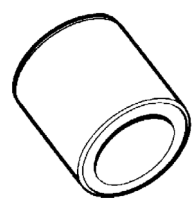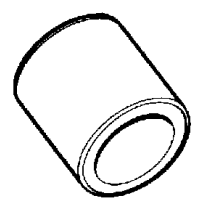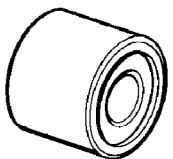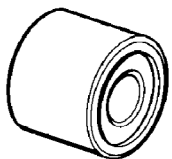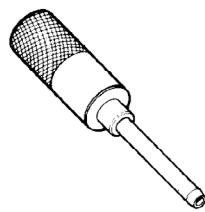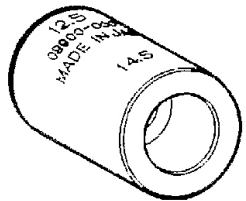 <p>09916-53350 Valve guide installer attachment</p>	 <p>09916-53360 Valve guide installer attachment</p>	 <p>09916-53370 Valve guide installer attachment</p>	 <p>09916-53380 Valve guide installer attachment</p>
 <p>09916-54531 Valve guide installer attachment</p>	 <p>09916-57311 Valve guide installer attachment</p>	 <p>09916-57321 Valve guide installer handle</p>	 <p>09916-57360 Valve guide installer attachment</p>
 <p>09916-57370 Valve guide installer attachment</p>	 <p>09916-64510 Tappet depressor</p>	 <p>09916-74521 Piston ring compressor handle</p>	 <p>09916-74540 Piston ring compressor band (63 - 75 mm)</p>
 <p>09916-74550 Piston ring compressor band (73 - 85 mm)</p>	 <p>09916-77310 Piston ring compressor</p>	 <p>09917-10410 Tappet adjuster wrench</p>	 <p>09917-14910 Tappet adjuster wrench</p>




09917-14920

 Tappet adjuster wrench

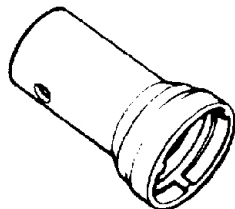

09917-23711

 Ring nut socket wrench

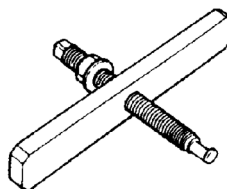


09917-50410

Bearing remover




09918-53810

 Cam chain tensioner locking tool

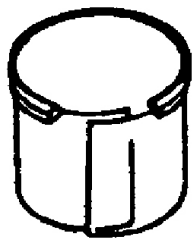


09919-28610

 Sleeve protector

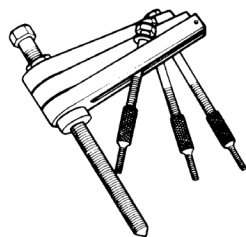


09920-13120

 Crankcase and shaft remover

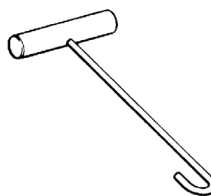


09920-20310

 Clutch spring hook

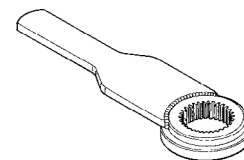


09920-31010

 CVT primary pulley shaft holder

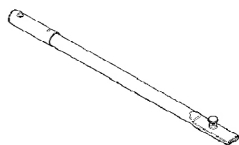


09920-31020

 Extension handle

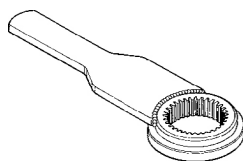


09920-31030

 CVT secondary pulley shaft handle

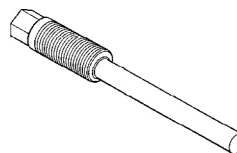


09920-31040

 CVT primary pulley shaft adapter remover

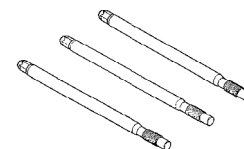


09920-31050

 CVT unit guide

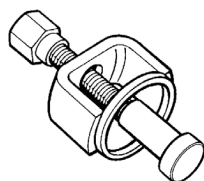


09920-33510

 Clutch spring compressor

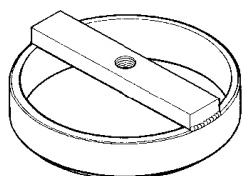


09920-33530

 Clutch spring compressor

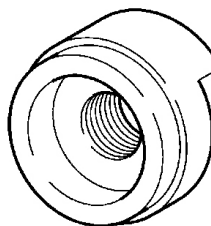


09920-33540

 Clutch shoe remover

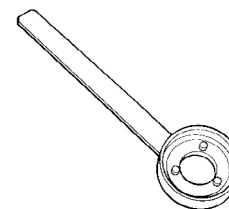

09920-34830

 
Starter clutch rotor holder

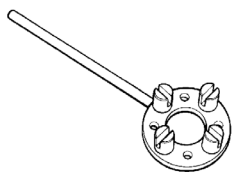


09920-53730
Clutch sleeve hub holder



 
09920-53740
Clutch sleeve hub holder

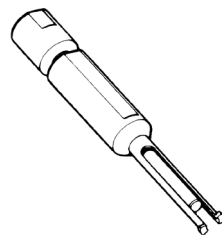


09921-20210
Bearing remover (12 mm)

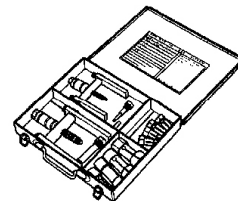 


09921-20240
Bearing remover set

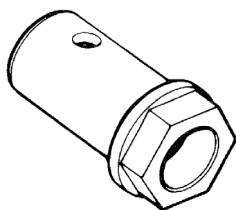 

 
09921-21820
Bearing retainer wrench
(44 mm)

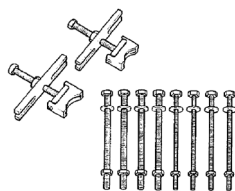

09921-21910
Bearing holder set

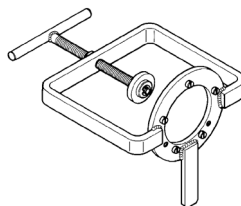 


09922-31420
Clutch spring compressor

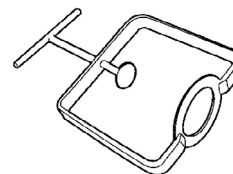 


09922-31430
Moveable drive face spring
compressor



 
09923-73210
Bearing remover

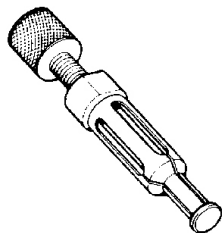

 
09923-74511
Bearing remover
(20 - 38 mm)

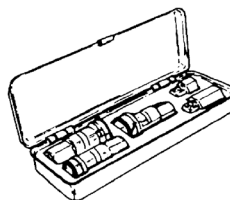


09930-10121
Spark plug wrench set

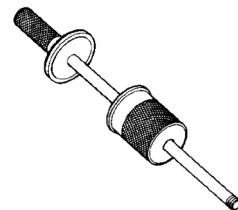 


09930-30104
Rotor remover sliding shaft

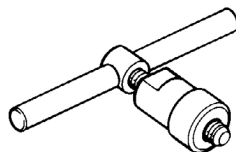 


09930-30113
Flywheel rotor remover

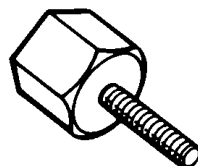 


09930-30141
Rotor remover
attachment A

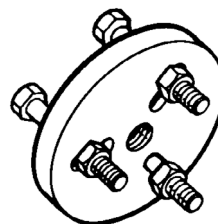 

09930-30211
Rotor remover
attachment G

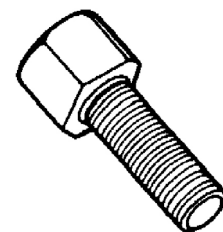 


09930-30450
Rotor remover bolt

 


09930-30460

 Rotor remover bolt

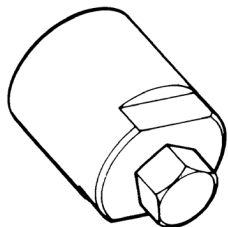


09930-30721

 Rotor remover

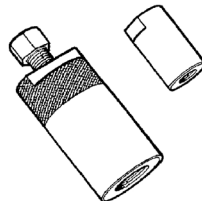


09930-31921

 Rotor remover set

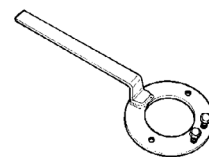


09930-32410

 Rotor holder

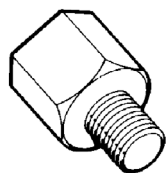


09930-33710

 Rotor remover attachment

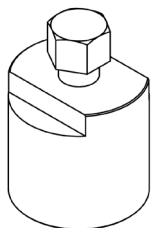


09930-33730

 Rotor remover

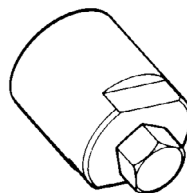


09930-34932

 Rotor remover

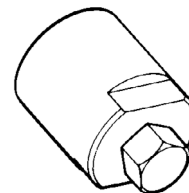


09930-34951

 Rotor remover

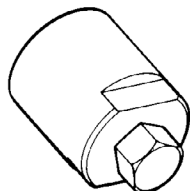


09930-34960

 Rotor remover

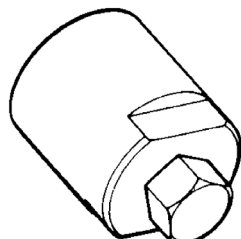

09930-34970

 Rotor remover

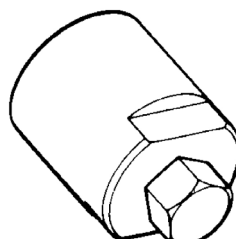


09930-34980

Rotor remover



09930-35010

 Rotor remover

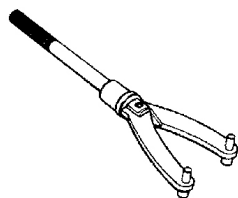


09930-40113

Rotor holder




09930-40120

 Rotor holder attachment A

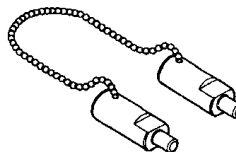


09930-40131

 Rotor holder attachment B

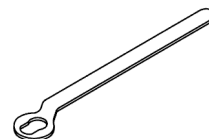


09930-40210

 Rotor holder

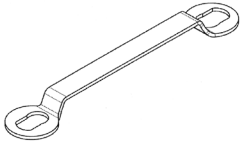


09930-44521

 Rotor holder

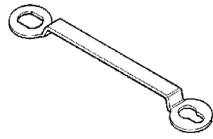


09930-44530

 Rotor holder

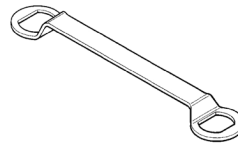


09930-44541

 Rotor holder

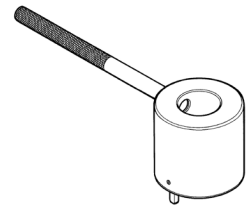


09930-44560

 Rotor holder

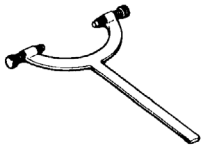


09930-44913

 Rotor holder

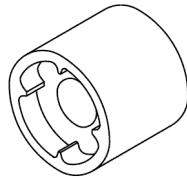


09930-70220

 Starter torque limiter socket

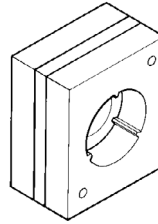


09930-73110

 Starter torque limiter holder

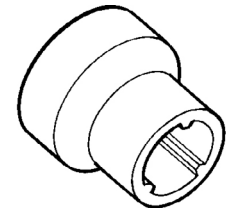


09930-73120

 Starter torque limiter socket

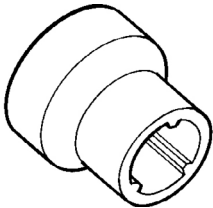


09930-73130

 Starter torque limiter socket

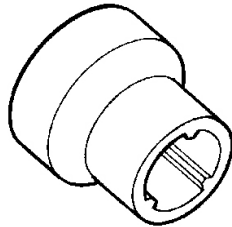


09930-73140

 Starter torque limiter socket

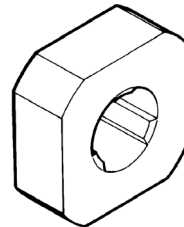


09930-73150

 Output shaft holder

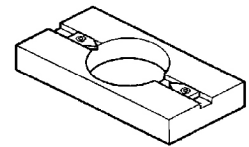


09930-73170

 Starter torque limiter holder

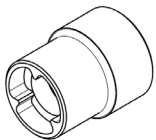


09930-73180

 Starter torque limiter socket

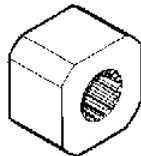


09930-73190

  Output shaft holder

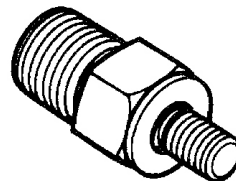

 
 

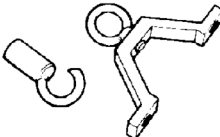 
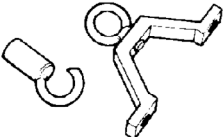 
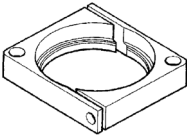 
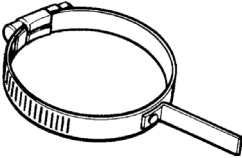 
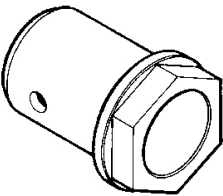 
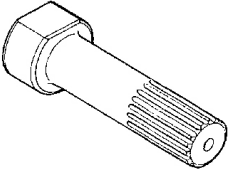 
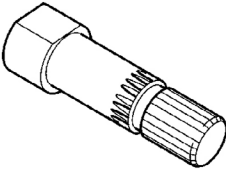 
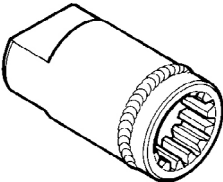 
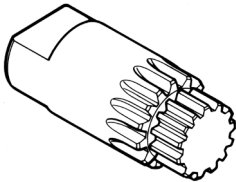 
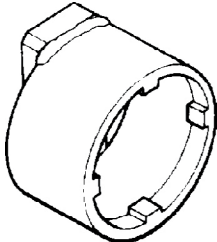 
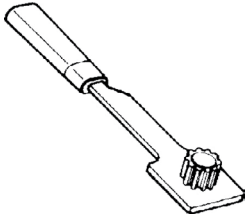 
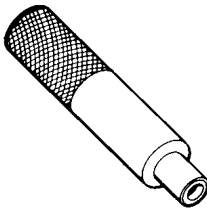 
 
09940-40211

 
 

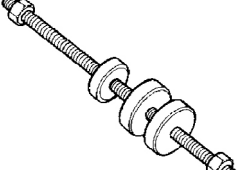 
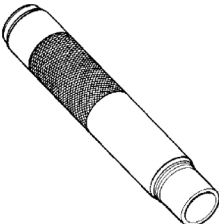 
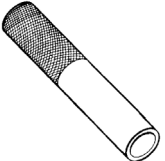 
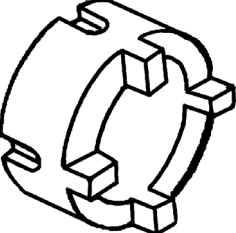 
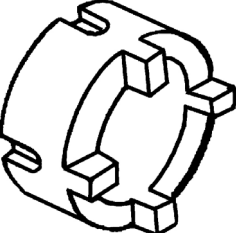 
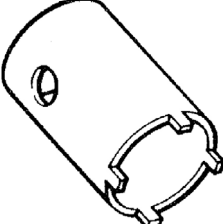 
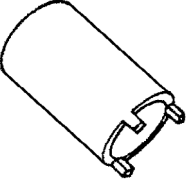 
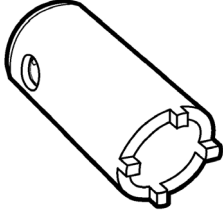 
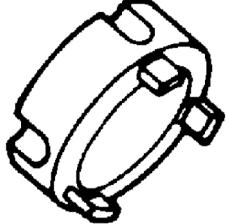 
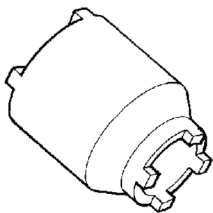 
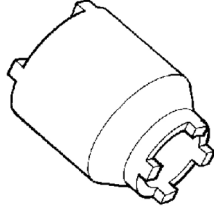 
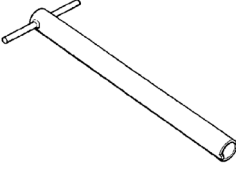 
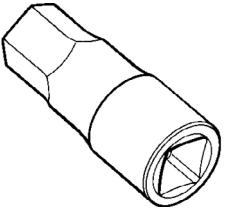 
Fuel pressure gauge adapter
















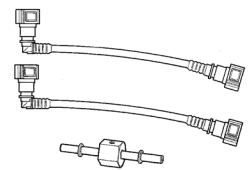



09940-40220

Fuel pressure gauge attachment

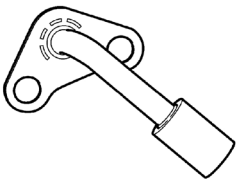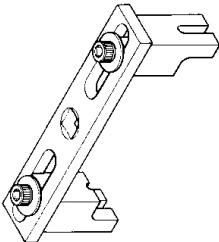 <p>09940-40230 Fuel pressure gauge attachment</p>	 <p>09941-51012 Ring locknut wrench</p>	 <p>09941-64511 Bearing / oil seal remover</p>	 <p>09924-21920 Wheel hub remover set</p>
 <p>09924-21940 Wheel hub remover set</p>	 <p>09924-21950 Front drive shaft remover</p>	 <p>09924-34510 Backlash measuring tool (27 - 50 mm)</p>	 <p>09924-41830 Bearing retainer wrench (50 mm)</p>
 <p>09924-52420 Secondary bevel gear holder</p>	 <p>09924-52450 Output shaft holder</p>	 <p>09924-52470 Fixed final drive holder</p>	 <p>09924-52480 Fixed propeller shaft holder</p>
 <p>09924-62410 Final drive bearing holder wrench</p>	 <p>09924-64510 Final drive gear coupling holder</p>	 <p>09924-74510 Bearing / oil seal installer handle</p>	 <p>09924-74520 Oil seal installer / remover</p>

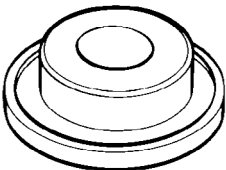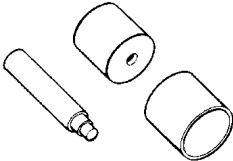 <p>09924-74550 Bearing / oil seal installer</p>	 <p>09924-74570 Final drive bearing installer</p>	 <p>09924-84510 Bearing installer kit</p>	 <p>09924-84521 Bearing installer kit</p>
 <p>09925-18011 Steering bearing installer</p>	 <p>09925-98221 Bearing installer set</p>	 <p>09940-11420 Steering stem nut socket wrench</p>	 <p>09940-11430 Steering stem nut socket wrench</p>
 <p>09940-14911 Steering stem nut socket wrench</p>	 <p>09940-14930 Steering stem nut socket wrench</p>	 <p>09940-14940 Swingarm pivot adjuster wrench</p>	 <p>09940-14960 Steering stem nut socket wrench</p>
 <p>09940-14980 Engine mounting adjuster wrench</p>	 <p>09940-14990 Engine mounting adjuster wrench</p>	 <p>09940-30221 Front fork cylinder holder</p>	 <p>09940-30230 Hexagon bit socket</p>

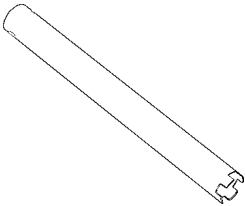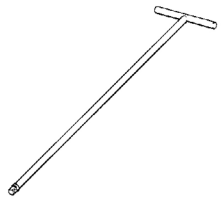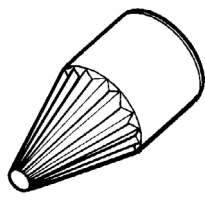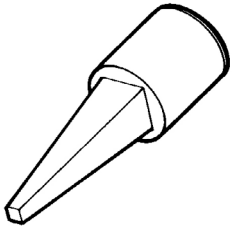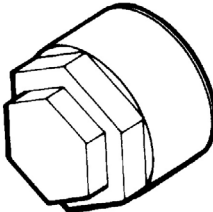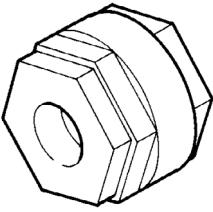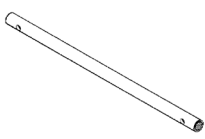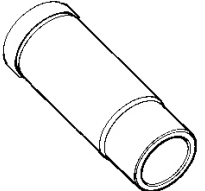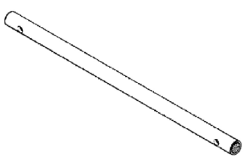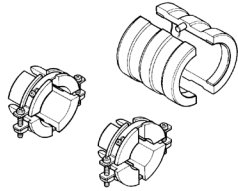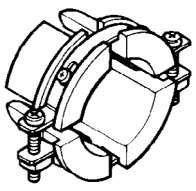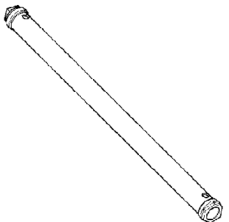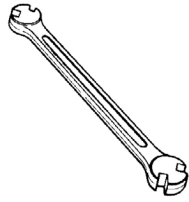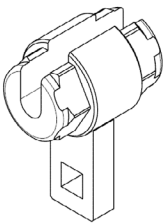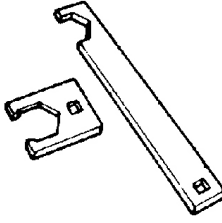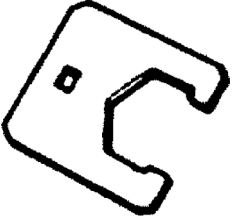                 <p>09940-30250 Front fork cylinder holder</p>	 <p>09940-34520 T-handle (3/8" drive)</p>	 <p>09940-34531 Front fork assembly attachment (A)</p>	 <p>09940-34561 Front fork assembly attachment (D)</p>
 <p>09940-34581 Front fork assembly attachment (F)</p>	 <p>09940-34592 Front fork assembly attachment (G)</p>	 <p>09940-50120 Front fork inner rod holder</p>	 <p>09940-51410 Bearing installer</p>
 <p>09940-52841 Front fork inner rod holder</p>	 <p>09940-52861 Front fork oil seal installer set</p>	 <p>09940-52880 Oil seal attachment (36 - 46 mm)</p>	 <p>09940-54821 Front fork cylinder holder</p>
 <p>09940-60113 Spoke wrench</p>	 <p>09940-84711 Rod guide case wrench For GSX-R Showa BPF front forks</p>	 <p>09940-92430 Rear axle nut wrench set (36 mm)</p>	 <p>09940-92450 Rear axle nut wrench set (46 mm)</p>

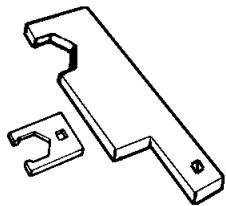 

09940-92460

Rear axle nut wrench set
(60 mm)



 
09940-92720

Spring scale




09940-94922

Front fork spring stopper
plate

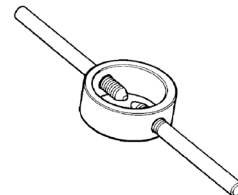


09940-94930

 Front fork spacer holder

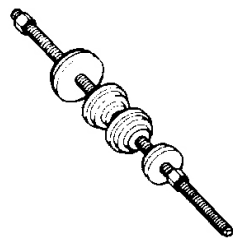


09941-34513

 Bearing installer set

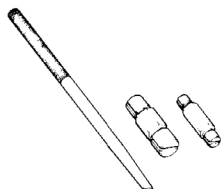


09941-50111

 Wheel bearing remover set

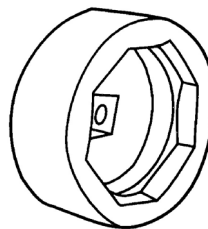


09941-53630

 Front fork top cap wrench
(50 mm)

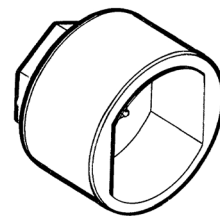


09941-53660

 RCU socket wrench
(24 mm)

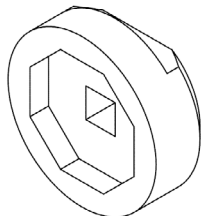

09941-53670

 Front fork cap socket
wrench (45 mm)

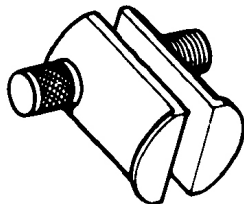

09941-54911

Bearing outer race remover



 
09941-74910

Steering stem bearing
remover




09941-74911

Steering stem bearing
remover

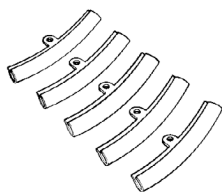


09941-94510

 Rim protector (set of 5 pcs.)

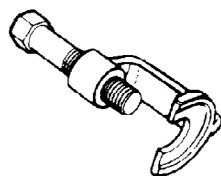


09942-72410

 Tie-rod end remover

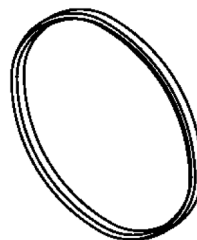


09943-02810

 Rear cushion guard ring

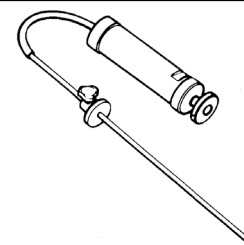


09943-74111

 Fork oil level gauge

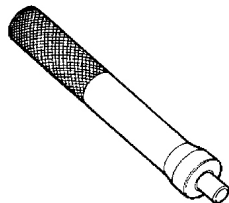


09943-88211

 Pinion bearing installer

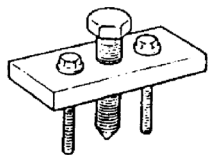


09944-36011

 Steering wheel remover

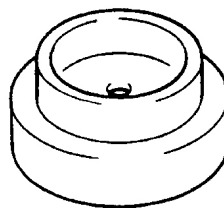


09944-66010

 Oil seal installer

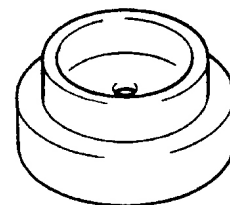


09944-66030

 Oil seal installer

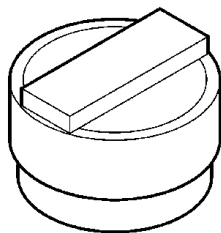


09951-15810

 Brake disc cover installer

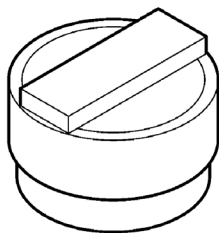


09951-16080

 Bearing installer

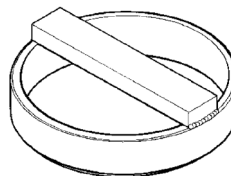


09951-16310

 Brake disc cover installer

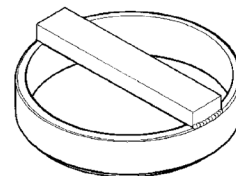


09951-17010

 Bearing installer

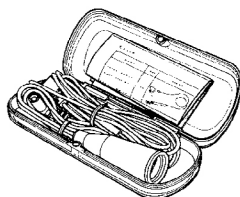


09900-25009

 Back probe kit

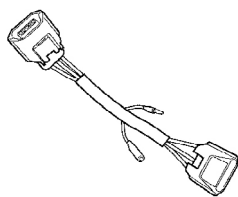


09900-28630

 Throttle Position Sensor (TPS) test wire harness

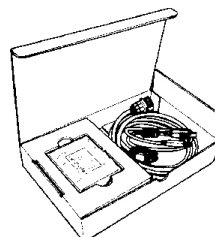

09904-41010

 Suzuki Diagnostic System (SDS) set

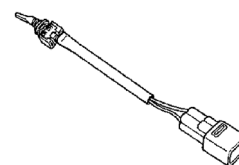


09930-82710

Mode select switch (4 pin)



09930-82720

 Mode select switch (6 pin)

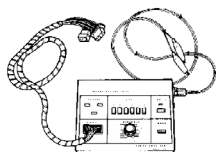

09931-94490

Digital igniter checker

Neway Valve Seat Cutter Tool Set

Neway offers a custom valve seat cutter kit built to Suzuki's specifications.

The Neway Valve Seat Cutter Kit for Suzuki Motorcycles (**Neway P/N KM2508**) contains the following components:

Cutter Bodies:

- 130 Cutter - Blades fixed at O.D. of .816" 15°
- 131 Cutter - Blades fixed at O.D. of .850" 45°
- 122 Cutter - 1" dia. 45°
- 111 Cutter - 1" dia. 60°
- 121 Cutter - 1" dia. 15°
- 126 Cutter - 1" dia. 30°
- 615 Cutter - 1-3/8" dia. 15° x 45°
- 212 Cutter - 1-1/4" dia. 15° x 75°
- 608 Cutter - 1-1/4" dia. 45°
- 216 Cutter - 1-1/2" dia. 75°
- 635 Cutter - 1-5/8" dia. 15° x 45°

Valve Guide Pilots:

- 100-4.0 Solid Pilot — 4mm dia.
- 100-4.5 Solid Pilot — 4.5mm dia.
- 100-5.0 Solid Pilot — 5.0mm dia.
- 100-5.5 Solid Pilot — 5.5mm dia.
- 100-5.52 Solid Pilot — 5.52mm dia.
- 100-7.0 Solid Pilot — 7mm dia.
- 140-5.0 Solid Pilot — 5mm dia.
- 140-5.5 Solid Pilot — 5.5mm dia.
- 140-6.98 Solid Pilot — 6.98mm dia.
- 140-7.0 Solid Pilot — 7.0mm dia.



To order the Suzuki valve seat cutter kit, contact Neway Manufacturing directly at:

www.newaymfg.com

or

(800) 248-3889

Neway Manufacturing Inc.
1013 N. Shiawassee St.
Corunna, Michigan 48817

DR-Z70 K8 - K9	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-32812	Crankshaft installer
09910-32860	Crankshaft installer spacer (20 mm)
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller
09913-70210	Bearing installer set
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-72410	Oil pressure gauge attachment
09915-74511	Oil pressure gauge (600 kPa)
09915-74533	Oil pressure gauge adapter
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09917-14910	Tappet adjuster wrench
09920-13120	Crankcase and shaft remover
09920-33510	Clutch spring compressor
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09930-10121	Spark plug wrench set
09930-34951	Rotor remover
09930-44530	Rotor holder
Chassis Tools	
Tool P/N	Description
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-51410	Bearing installer
09940-60113	Spoke wrench
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09943-74111	Fork oil level gauge

RM85/L K8 - L2	
Engine Tools	
Tool P/N	Description
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09920-13120	Crankcase and shaft remover
09920-20310	Clutch spring hook
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-73210	Bearing remover
09930-30141	Rotor remover attachment A
09930-30211	Rotor remover attachment G
Chassis Tools	
Tool P/N	Description
09924-84521	Bearing installer set
09940-14930	Steering stem nut socket wrench
09940-30250	Front fork cylinder holder

DR-Z125/L K3 - L3	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-63311	Compression gauge adapter
09915-70610	Oil pressure gauge attachment
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09920-13120	Crankcase and shaft remover
09920-53730	Clutch sleeve hub holder

(Continued)

09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09930-10121	Spark plug wrench set
09930-40113	Rotor holder

Chassis Tools

Tool P/N	Description
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14930	Steering stem nut socket wrench
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

DR200SE T - L3

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-75821	Bearing installer
09915-63210	Compression gauge adapter
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09916-44920	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09930-34932	Rotor remover
09941-64511	Bearing & oil seal remover

Chassis Tools

Tool P/N	Description
09924-84521	Bearing installer set
09940-34520	T-handle (3/8" drive)

09940-34561	Front fork assembly attachment (D)
09940-52861	Front fork oil seal installer set
09940-60113	Spoke nipple wrench
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

GZ250 X - K9

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09910-32840	Crankshaft installer attachment
09910-34510	Piston pin puller
09913-50121	Oil seal remover
09913-76010	Bearing installer
09913-84510	Bearing installer
09913-85210	Bearing / oil seal installer
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09917-14920	Tappet adjuster wrench
09920-13120	Crankcase and shaft remover
09930-34960	Rotor remover
09930-44913	Rotor holder

Chassis Tools

Tool P/N	Description
09940-14911	Steering stem nut socket wrench
09940-52880	Oil seal attachment (36 - 46 mm)
09940-60113	Spoke wrench
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

RM250 K8

Engine Tools

Tool P/N	Description
09910-32812	Crankshaft installer
09910-34510	Piston pin puller
09911-11310	Crankshaft installer attachment
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09917-50410	Bearing remover
09920-13120	Crankcase and shaft remover
09920-20310	Clutch spring hook
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09930-30104	Rotor remover sliding shaft
09930-30113	Flywheel rotor remover
09930-40113	Rotor holder

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench
09940-34581	Front fork assembly attachment (F)
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-53630	Front fork top cap wrench (50 mm)
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer

RM-Z250 K7 - L3

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09914-61010	Gear holder

09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-14530	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-33320	Valve guide reamer (9.8 mm)
09916-34542	Reamer handle
09916-43211	Valve guide remover / installer
09916-44920	Valve guide installer attachment
09919-28610	Sleeve protector
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-44560	Rotor holder
09940-40211	Fuel pressure gauge adapter

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench
09940-34581	Front fork assembly attachment (F)
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-53630	Front fork top cap wrench (50 mm)
09941-53660	RCU socket wrench (24 mm)
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-02810	Rear cushion guard ring

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set

TU250X K9 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09910-32840	Crankshaft installer attachment
09910-34510	Piston pin puller
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-63210	Compression gauge adapter
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09917-14910	Tappet adjuster wrench
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34960	Rotor remover
09930-44521	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

--

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-30230	Hexagon bit socket (17 mm)
09940-34520	T-handle (3/8" drive)
09940-34561	Front fork assembly attachment (D)
09940-52861	Front fork oil seal installer set

09940-60113	Spoke nipple wrench
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

--

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

DR-Z400S/SM Y - L3

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-63311	Compression gauge adapter
09915-70610	Oil pressure gauge attachment
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09930-31921	Rotor remover set
09930-73170	Starter torque limiter holder
09930-73180	Starter torque limiter holder

(Continued)

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34581	Front fork assembly attachment (F)
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-54821	Front fork cylinder holder
09940-94922	Front fork spring stopper plate
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

RMX450Z L0

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09914-61010	Gear holder
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09919-28610	Sleeve protector

09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34932	Rotor remover
09930-35010	Rotor remover
09930-40210	Rotor holder
09930-70220	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-53630	Front fork top cap wrench (50 mm)
09941-53660	RCU socket wrench (24 mm)

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set

RM-Z450 K8 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09914-61010	Gear holder
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-44910	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34951	Rotor remover
09930-35010	Rotor remover
09930-44560	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench

09940-34581	Front fork assembly attachment (F)
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-53630	Front fork top cap wrench (50 mm)
09941-53660	RCU socket wrench (24 mm)
09941-54911	Bearing outer race remover
09943-02810	Rear cushion guard ring
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set

GS500/E/F K - K9	
Engine Tools	
Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-20116	Connecting rod stopper
09910-34510	Piston pin puller
09915-63210	Compression gauge adapter
09916-14510	Valve spring compressor
09916-34531	Valve guide reamer (12.3 mm)
09916-54531	Valve guide installer attachment
09916-57321	Valve guide installer handle
09916-64510	Tappet depressor
09916-74521	Piston ring compressor handle
09916-74540	Piston ring compressor band (63 - 75 mm)
09923-73210	Bearing remover
09930-33710	Rotor remover attachment
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-74910	Steering stem bearing installer
09941-94510	Rim protector (5 pcs.)
09943-74111	Fork oil level gauge

GSX-R600 K8 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-33320	Valve guide reamer (9.8 mm)
09916-34542	Reamer handle
09916-43211	Valve guide remover / installer
09916-57370	Valve guide installer attachment
09916-77310	Piston ring compressor
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34980	Rotor remover
09930-44521	Rotor holder
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14980	Engine mounting adjuster wrench

09940-30221	Front fork cylinder holder
09940-30230	Hexagon bit socket (17 mm)
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-84711	Rod guide case wrench
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-53670	Front fork cap socket wrench (45 mm)
09943-74111	Fork oil level gauge
09943-88211	Pinion bearing installer
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

DL650/A K4 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-70610	Oil pressure gauge attachment
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor

(Continued)

09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34580	Valve guide reamer (10.8 mm)
09916-53330	Valve guide installer attachment
09919-28610	Sleeve protector
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09930-10121	Spark plug wrench set
09930-30450	Rotor remover bolt
09930-40113	Rotor holder
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14990	Engine mounting adjuster wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09943-74111	Fork oil level gauge

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82710	Mode select switch (4 pin)
09930-82720	Mode select switch (6 pin)

DR650SE T - L3

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-20116	Connecting rod stopper
09910-32812	Crankshaft installer
09910-32860	Crankshaft installer spacer (20 mm)
09910-33210	Piston pin puller attachment
09913-10720	Compression gauge adapter
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller
09913-75810	Bearing installer
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09917-23711	Ring nut socket wrench
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09923-73210	Bearing remover
09930-30721	Rotor remover
09930-73110	Starter torque limiter socket
09930-73120	Starter torque limiter socket

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-14960	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34592	Front fork assembly attachment (G)
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

GSX650F K8 - K9	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34580	Valve guide reamer (10.8 mm)
09916-43211	Valve guide remover / installer
09916-74521	Piston ring compressor handle
09916-74540	Piston ring compressor band (63 - 75 mm)
09919-28610	Sleeve protector
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34970	Rotor remover
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle
09940-34592	Front fork assembly attachment (G)
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

LS650 G - L3	
Engine Tools	
Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09913-50121	Oil seal remover
09915-63210	Compression gauge adapter
09915-72410	Oil pressure gauge attachment
09916-14510	Valve spring compressor
09916-34531	Valve guide reamer (12.3 mm)
09920-13120	Crankcase and shaft remover
09920-53722	Clutch sleeve hub holder
09923-73210	Bearing remover
09930-30141	Rotor remover attachment A
09930-32410	Rotor holder
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle
09940-34592	Front fork assembly attachment (G)
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge
Electrical Tools	
Tool P/N	Description
09931-94490	Digital igniter checker

SFV650 K9 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-70610	Oil pressure gauge attachment
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34580	Valve guide reamer (10.8 mm)
09916-43211	Valve guide remover / installer
09916-53330	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09930-10121	Spark plug wrench set
09930-30450	Rotor remover bolt
09930-40113	Rotor holder
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

SV650/S/SF/A K3 - K9	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-20116	Connecting rod stopper
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34580	Valve guide reamer (10.8 mm)
09916-53330	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30450	Rotor remover bolt
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

(Continued)

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14990	Engine mounting adjuster wrench
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09943-74111	Fork oil level gauge

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09930-82720	Mode select switch (6 pin)

GSX-R750 K8 - L3

Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-33320	Valve guide reamer (9.8 mm)
09916-34542	Reamer handle
09916-43211	Valve guide remover / installer
09916-43240	Valve guide installer attachment
09916-43250	Valve guide installer attachment
09916-77310	Piston ring compressor

09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34980	Rotor remover
09930-44521	Rotor holder
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14980	Engine mounting adjuster wrench
09940-30221	Front fork cylinder holder
09940-30230	Hexagon bit socket (17 mm)
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-84711	Rod guide case wrench
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-53670	Front fork cap socket wrench (45 mm)
09943-74111	Fork oil level gauge
09943-88211	Pinion bearing installer

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VL800/C/T K1 - L3	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09913-75821	Bearing installer
09913-84510	Bearing installer
09915-40620	Oil filter wrench
09915-63210	Compression gauge adapter
09915-74532	Oil pressure gauge adapter
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-44920	Valve guide installer attachment
09917-10410	Tappet adjuster wrench
09918-53810	Chain tensioner lock tool
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09921-21820	Bearing retainer wrench (44 mm)
09923-73210	Bearing remover
09930-10121	Spark plug wrench set
09930-33730	Rotor remover
09930-40113	Rotor holder
09941-64511	Bearing & oil seal remover
Chassis Tools	
Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set

09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VS800/GL N - K9	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-33210	Piston pin puller attachment
09910-34510	Piston pin puller
09913-10730	Fuel level gauge
09913-13140	Carburetor balancer attachment
09913-50121	Oil seal remover
09913-75821	Bearing installer
09915-47320	Oil filter wrench
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-44920	Valve guide installer attachment
09917-10410	Tappet adjuster wrench
09918-53810	Chain tensioner lock tool
09920-53722	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-21820	Bearing retainer wrench (44 mm)
09923-73210	Bearing remover
09941-64511	Bearing & oil seal remover

Chassis Tools	
Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74510	Bearing and oil seal installer handle

(Continued)

09924-74520	Oil seal installer / remover
09924-74550	Bearing / oil seal installer
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34561	Front fork assembly attachment (D)
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools

Tool P/N Description

09931-94490	Digital igniter checker
-------------	-------------------------

VZ800 K5 - L3

Engine Tools

Tool P/N Description

09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover
09913-60230	Journal bearing installer / remover
09913-60241	Journal bearing holder
09913-60910	Bearing / gear puller
09913-70210	Bearing installer set
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09915-40620	Oil filter wrench
09915-63210	Compression gauge adapter
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74532	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer

09916-44920	Valve guide installer attachment
09917-10410	Tappet adjuster wrench
09918-53810	Chain tensioner lock tool
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09921-21820	Bearing retainer wrench (44 mm)
09923-73210	Bearing remover
09930-10121	Spark plug wrench set
09930-33730	Rotor remover
09930-40113	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09940-50120	Front fork inner rod holder
09941-64511	Bearing & oil seal remover

Chassis Tools

Tool P/N Description

09924-34510	Backlash measuring tool (27 - 50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-30221	Front fork cylinder holder
09940-51410	Bearing installer
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools

Tool P/N Description

09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

DL1000 K2 - L2	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09915-40620	Oil filter wrench
09915-72410	Oil pressure gauge attachment
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-53340	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-30450	Rotor remover bolt
09930-44541	Rotor holder
09930-73110	Starter torque limiter socket
09930-73120	Starter torque limiter socket
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
Chassis Tools	
Tool P/N	Description
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14990	Engine mounting adjuster wrench
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set

09941-54911	Bearing outer race remover
09943-74111	Fork oil level gauge
Electrical Tools	
Tool P/N	Description
09930-82710	Mode select switch (4 pin)

GSX-R1000 K7 - L3	
Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-17410	Oil pressure gauge adapter
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14530	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-33320	Valve guide reamer (9.8 mm)
09916-34542	Reamer handle
09916-43211	Valve guide remover / installer
09916-53330	Valve guide installer attachment
09916-53380	Valve guide installer attachment
09916-77310	Piston ring compressor
09919-28610	Sleeve protector
09920-34830	Starter clutch rotor holder
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30460	Rotor remover bolt

(Continued)

09930-34970	Rotor remover
09930-34980	Rotor remover
09930-40113	Rotor holder
09930-44530	Rotor holder
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14980	Engine mounting adjuster wrench
09940-30221	Front fork cylinder holder
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-84711	Rod guide case wrench
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-53670	Front fork cap socket wrench (45 mm)
09943-74111	Fork oil level gauge
09943-88211	Pinion bearing installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

**GSF1250S/A K7 - K9
GSX1250FA L1**

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover

09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34580	Valve guide reamer (10.8 mm)
09916-43211	Valve guide remover / installer
09916-74521	Piston ring compressor handle
09916-74550	Piston ring compressor band (73 - 85 mm)
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-34970	Rotor remover
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

(Continued)

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82710	Mode select switch (4 pin)
09930-82720	Mode select switch (6 pin)

GSX1300R/A K8 - L3

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74540	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14522	Valve spring compressor attachment
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53350	Valve guide installer attachment
09916-74521	Piston ring compressor handle
09916-74550	Piston ring compressor band (73 - 85 mm)
09920-34830	Starter clutch rotor holder
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30450	Rotor remover bolt
09930-44530	Rotor holder
09930-73140	Starter torque limiter socket
09930-73170	Starter torque limiter holder

09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-14940	Swingarm pivot adjuster wrench
09940-14960	Steering stem nut socket wrench
09940-14990	Engine mounting adjuster wrench
09940-30221	Front fork cylinder holder
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VS1400/GL J - K8	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-20116	Connecting rod stopper
09913-13140	Carburetor balancer attachment
09913-75821	Bearing installer
09913-76010	Bearing installer
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34531	Valve guide reamer (12.3 mm)
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-44920	Valve guide installer attachment
09916-57311	Valve guide installer attachment
09916-57321	Valve guide installer handle
09918-53810	Chain tensioner lock tool
09921-20210	Bearing remover (12 mm)
09923-73210	Bearing remover
09930-40113	Rotor holder
09941-64511	Bearing & oil seal remover
Chassis Tools	
Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74910	Steering stem bearing installer
09943-74111	Fork oil level gauge

VL1500/T W - L3	
Engine Tools	
Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-60910	Bearing / gear puller
09913-75810	Bearing installer
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09915-40620	Oil filter wrench
09915-74511	Oil pressure gauge (600 kPa)
09915-74532	Oil pressure gauge adapter
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34531	Valve guide reamer (12.3 mm)
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-57321	Valve guide installer handle
09918-53810	Chain tensioner lock tool
09920-53740	Clutch sleeve hub holder
09930-10121	Spark plug wrench set
09930-30721	Rotor remover
09930-40113	Rotor holder
09930-73130	Starter torque limiter socket
09930-73140	Starter torque limiter socket
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-64511	Bearing & oil seal remover
Chassis Tools	
Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09924-84521	Bearing installer set

(Continued)

09925-98221	Bearing installer set
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-52861	Front fork oil seal installer set
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge
09943-88211	Pinion bearing installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VZ1500 K9 - L3

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-60250	Journal bearing installer / holder set
09913-70210	Bearing installer set
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-74533	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-44920	Valve guide installer attachment

09917-10410	Tappet adjuster wrench
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-40113	Rotor holder
09930-73140	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-64511	Bearing & oil seal remover

Chassis Tools

Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-41830	Bearing retainer wrench (50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-74520	Oil seal installer / remover
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-30221	Front fork cylinder holder
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-51410	Bearing installer
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

(Continued)

09951-16080	Bearing installer
09951-16310	Brake disc dust cover installer
09951-17010	Bearing installer
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VLR1800/T K8 - K9

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller
09913-70210	Bearing installer set
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09915-17410	Oil pressure gauge adapter
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-44940	Valve guide installer attachment
09916-46020	Valve guide remover / installer
09918-53810	Chain tensioner lock tool
09919-28610	Sleeve protector
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set

09930-30104	Rotor remover sliding shaft
09930-34970	Rotor remover
09930-44541	Rotor holder
09930-73140	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-64511	Bearing & oil seal remover

Chassis Tools

Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-41830	Bearing retainer wrench (50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-51410	Bearing installer
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge
09951-16080	Bearing installer
09951-16310	Brake disc dust cover installer
09951-17010	Bearing installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

VZR1800/N K6 - L3	
Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09913-75821	Bearing installer
09913-76010	Bearing installer
09913-84510	Bearing installer
09915-17410	Oil pressure gauge adapter
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-44940	Valve guide installer attachment
09916-46020	Valve guide remover / installer
09918-53810	Chain tensioner lock tool
09919-28610	Sleeve protector
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-74511	Bearing remover (Φ 20 - 38)
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-73140	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-64511	Bearing & oil seal remover
Chassis Tools	
Tool P/N	Description
09924-34510	Backlash measuring tool (27 - 50 mm)
09924-41830	Bearing retainer wrench (50 mm)
09924-62410	Final drive bearing holder wrench
09924-64510	Final drive gear coupling holder
09924-84510	Bearing installer set
09924-84521	Bearing installer set

09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-30221	Front fork cylinder holder
09940-51410	Bearing installer
09940-52841	Front fork inner rod holder
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09940-94922	Front fork spring stopper plate
09940-94930	Front fork spacer holder
09941-34513	Bearing installer set
09943-74111	Fork oil level gauge
09951-16080	Bearing installer
09951-16310	Brake disc dust cover installer
09951-17010	Bearing installer
Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

AN400/A K7 - L3	
Engine Tools	
Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09910-32812	Crankshaft installer
09910-32870	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09913-75821	Bearing installer
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74570	Oil pressure gauge attachment
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14530	Valve spring compressor attachment
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34561	Valve guide reamer (11.3 mm)

(Continued)

09916-53330	Valve guide installer attachment
09919-28610	Sleeve protector
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09922-31420	Clutch spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-40113	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40230	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84521	Bearing installer set
09940-11420	Steering stem nut socket wrench
09940-11430	Steering stem nut socket wrench
09940-14911	Steering stem nut socket wrench
09940-30230	Hexagon bit socket (17 mm)
09940-34520	T-handle (3/8" drive)
09940-34531	Front fork assembly attachment (A)
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

AN650/A K3 - L3

Engine Tools

Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer

09910-32850	Crankshaft installer attachment
09913-50121	Oil seal remover
09913-60210	Journal bearing installer / remover
09913-60230	Journal bearing installer / remover
09913-60241	Journal bearing holder
09913-61510	Bearing puller
09913-70210	Bearing installer set
09913-75810	Bearing installer
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-33210	Valve guide reamer (4.5 mm)
09916-34542	Reamer handle
09916-34561	Valve guide reamer (11.3 mm)
09916-44930	Valve guide installer attachment
09917-23711	Ring nut socket wrench
09918-53810	Chain tensioner lock tool
09920-13120	Crankcase and shaft remover
09920-31010	CVT primary pulley shaft holder
09920-31020	Extension handle
09920-31030	CVT secondary pulley shaft holder
09920-31040	CVT primary pulley shaft adapter remover
09920-31050	CVT unit guide set
09920-33530	Clutch spring compressor
09920-34830	Starter clutch rotor holder
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09930-30450	Rotor remover bolt
09930-40113	Rotor holder
09930-73120	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-51012	Ring locknut wrench

(Continued)

Chassis Tools	
Tool P/N	Description
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09925-18011	Steering bearing installer
09940-14911	Steering stem nut socket wrench
09940-30230	Hexagon bit socket (17 mm)
09940-52861	Front fork oil seal installer set
09940-92720	Spring scale
09941-34513	Bearing installer set
09941-54911	Bearing outer race remover
09941-74911	Steering stem bearing installer
09943-74111	Fork oil level gauge

Electrical Tools	
Tool P/N	Description
09930-82720	Mode select switch (6 pin)

LT-Z50 K6 - K9

Engine Tools	
Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-64512	Compression gauge set
09920-13120	Crankcase and shaft remover
09921-20240	Bearing remover set
09922-31420	Clutch spring compressor
09923-73210	Bearing remover
09930-30104	Rotor remover sliding shaft
09930-40113	Rotor holder

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set

LT-Z90 K7 - K9

Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09917-14910	Tappet adjuster wrench
09920-13120	Crankcase and shaft remover
09921-20240	Bearing remover set
09922-31420	Clutch spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-34980	Rotor remover
09930-40113	Rotor holder

Chassis Tools	
Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-92460	Rear axle nut wrench set (60 mm)
09941-34513	Bearing installer set
09941-50111	Wheel bearing remover set

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set

LT-F250 K2 - L3

Engine Tools

Tool P/N	Description
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09913-85210	Bearing / oil seal installer
09915-74511	Oil pressure gauge (600 kPa)
09915-74532	Oil pressure gauge adapter
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09920-13120	Crankcase and shaft remover
09920-53730	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09921-21820	Bearing retainer wrench (44 mm)
09921-21910	Bearing holder set
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-35010	Rotor remover
09930-73150	Output shaft holder

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set

LT-Z250 K4 - K9

Engine Tools

Tool P/N	Description
09900-20806	Thickness ("feeler") gauge
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09913-85210	Bearing / oil seal installer
09915-74521	Oil pressure gauge hose
09916-10911	Valve lapper set

09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34561	Valve guide reamer (11.3 mm)
09916-44910	Valve guide remover / installer
09920-13120	Crankcase and shaft remover
09920-53730	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09921-21820	Bearing retainer wrench (44 mm)
09921-21910	Bearing holder set
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-35010	Rotor remover
09930-73150	Output shaft holder

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set

LT-A400/F K8 - L3
LT-F400/F K8 - L3

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer

(Continued)

09917-14910	Tappet adjuster wrench
09917-23711	Ring nut socket wrench
09920-13120	Crankcase and shaft remover
09920-20310	Clutch spring hook
09920-53730	Clutch sleeve hub holder
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09921-21910	Bearing holder set
09922-31430	Movable drive face spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30141	Rotor remover attachment A
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-40113	Rotor holder
09930-44541	Rotor holder
09930-73190	Output shaft holder
09941-64511	Bearing & oil seal remover

Chassis Tools

Tool P/N	Description
09924-21920	Wheel hub remover set
09924-41830	Bearing retainer wrench (50 mm)
09924-52420	Secondary bevel gear holder
09924-64510	Final drive gear coupling holder
09924-84521	Bearing installer set
09940-52861	Front fork oil seal installer set
09942-72410	Tie-rod end remover

Electrical Tools

Tool P/N	Description
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

LT-Z400 K3 - L3

Engine Tools

Tool P/N	Description
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09910-32820	Crankshaft installer spacer (10 mm)
09911-11310	Crankshaft installer attachment

09913-50121	Oil seal remover
09913-70210	Bearing installer set
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74532	Oil pressure gauge adapter
09915-74533	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09919-28610	Sleeve protector
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-73120	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09930-73180	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-92450	Rear axle nut wrench set (46 mm)
09940-92460	Rear axle nut wrench set (60 mm)
09941-34513	Bearing installer set
09942-72410	Tie-rod end remover

(Continued)

Electrical Tools	
Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

LT-A450X K7 - L0

Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-20806	Thickness ("feeler") gauge
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-70610	Oil pressure gauge attachment
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53370	Valve guide installer attachment
09917-23711	Ring nut socket wrench
09917-50410	Bearing remover
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-33540	Clutch shoe remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09921-21910	Bearing holder set
09922-31430	Movable drive face spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)

09924-21950	Front drive shaft remover
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-40113	Rotor holder
09930-40120	Rotor holder attachment A
09940-40211	Fuel pressure gauge adapter
09941-51012	Ring locknut wrench

Chassis Tools

Tool P/N	Description
09924-21940	Wheel hub remover set
09924-41830	Bearing retainer wrench (50 mm)
09924-52450	Output shaft holder
09924-52470	Fixed final drive gear holder
09924-52480	Fixed propeller shaft holder
09924-74510	Bearing and oil seal installer handle
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-52861	Front fork oil seal installer set
09940-92430	Rear axle nut wrench set (36 mm)
09944-66010	Oil seal installer
09944-66030	Oil seal installer
09951-15810	Brake disk dust cover installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

LT-R450 K6 - K9

Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09911-11310	Crankshaft installer attachment
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-70210	Bearing installer set

(Continued)

09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-44910	Valve guide remover / installer
09916-53360	Valve guide installer attachment
09920-13120	Crankcase and shaft remover
09920-53740	Clutch sleeve hub holder
09921-20210	Bearing remover (12 mm)
09921-20240	Bearing remover set
09923-73210	Bearing remover
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-73120	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment

Chassis Tools

Tool P/N	Description
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-92460	Rear axle nut wrench set (60 mm)
09941-34513	Bearing installer set

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09900-28630	TPS test wire harness
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)

LT-A500X/XP K9 - L3

Engine Tools	
Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09910-32820	Crankshaft installer spacer (10 mm)
09913-10750	Compression gauge adapter
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller
09913-61510	Bearing puller
09913-70210	Bearing installer set
09915-40620	Oil filter wrench
09915-64512	Compression gauge set
09915-70610	Oil pressure gauge attachment
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74533	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34542	Reamer handle
09916-34570	Valve guide reamer (5.0 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44310	Valve guide remover / installer
09916-53370	Valve guide installer attachment
09917-14910	Tappet adjuster wrench
09917-23711	Ring nut socket wrench
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-33540	Clutch shoe remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09921-21910	Bearing holder set
09922-31430	Movable drive face spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set

(Continued)

09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-40113	Rotor holder
09930-40120	Rotor holder attachment A
09930-44530	Rotor holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-51012	Ring locknut wrench

Chassis Tools

Tool P/N	Description
09924-41830	Bearing retainer wrench (50 mm)
09924-52420	Secondary bevel gear holder
09924-52450	Output shaft holder
09924-52470	Fixed final drive gear holder
09924-74520	Oil seal installer / remover
09924-74570	Final drive gear bearing installer
09924-84510	Bearing installer set
09924-84521	Bearing installer set
09940-92430	Rear axle nut wrench set (36 mm)
09941-34513	Bearing installer set
09942-72410	Tie-rod end remover
09943-88211	Pinion bearing installer
09944-36011	Steering wheel remover
09944-66010	Oil seal installer
09951-15810	Brake disk dust cover installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82710	Mode select switch (4 pin)
09930-82720	Mode select switch (6 pin)

LT-A750X/XP K9 - L3

Engine Tools

Tool P/N	Description
09900-20530	Cylinder gauge set
09900-22301	Plastigauge (0.025 - 0.076 mm)
09900-22302	Plastigauge (0.051 - 0.152 mm)
09910-32812	Crankshaft installer
09910-32860	Crankshaft installer spacer (20 mm)
09913-50121	Oil seal remover
09913-60910	Bearing / gear puller

09913-61510	Bearing puller
09913-70210	Bearing installer set
09913-84510	Bearing installer
09915-40620	Oil filter wrench
09915-63311	Compression gauge adapter
09915-64512	Compression gauge set
09915-74511	Oil pressure gauge (600 kPa)
09915-74521	Oil pressure gauge hose
09915-74533	Oil pressure gauge adapter
09915-77331	Oil pressure gauge (1000 kPa)
09916-10911	Valve lapper set
09916-14510	Valve spring compressor
09916-14910	Valve spring compressor attachment
09916-34550	Valve guide reamer (5.5 mm)
09916-34580	Valve guide reamer (10.8 mm)
09916-44910	Valve guide remover / installer
09916-57360	Valve guide installer attachment
09917-23711	Ring nut socket wrench
09919-28610	Sleeve protector
09920-13120	Crankcase and shaft remover
09920-31020	Extension handle
09920-33540	Clutch shoe remover
09920-53740	Clutch sleeve hub holder
09921-20240	Bearing remover set
09921-21910	Bearing holder set
09922-31430	Movable drive face spring compressor
09923-73210	Bearing remover
09923-74511	Bearing remover (Φ 20 - 38)
09930-10121	Spark plug wrench set
09930-30104	Rotor remover sliding shaft
09930-30721	Rotor remover
09930-31921	Rotor remover set
09930-40113	Rotor holder
09930-40131	Rotor holder attachment B
09930-73140	Starter torque limiter socket
09930-73170	Starter torque limiter holder
09940-40211	Fuel pressure gauge adapter
09940-40220	Fuel pressure gauge attachment
09941-51012	Ring locknut wrench
09941-64511	Bearing & oil seal remover

(Continued)

Chassis Tools

Tool P/N	Description
09924-41830	Bearing retainer wrench (50 mm)
09924-52420	Secondary bevel gear holder
09924-52450	Output shaft holder
09924-52470	Fixed final drive gear holder
09924-74520	Oil seal installer / remover
09924-74570	Final drive gear bearing installer
09924-84521	Bearing installer set
09940-92430	Rear axle nut wrench set (36 mm)
09941-34513	Bearing installer set
09942-72410	Tie-rod end remover
09943-88211	Pinion bearing installer
09944-66010	Oil seal installer
09951-15810	Brake disk dust cover installer

Electrical Tools

Tool P/N	Description
09900-25009	Back probe set
09904-41010	Suzuki Diagnostic System (SDS) set
09930-82720	Mode select switch (6 pin)



50
YEARS IN THE USA

2008-2013 Special Tools Catalog

P/N 99923-06892-007

Suzuki Motor of America, Inc.
3251 E. Imperial Highway
Brea, CA 92821
© 2013 Suzuki Motor of America, Inc.
07/10/2013